

Selection guide		SPA01	SPV01	SPF01	TPA04	TPV08	VAFP17
<b>General</b>							
Use on LV and HV systems		■	■	■	■	■	■
Accuracy of the meter		□	□	■	□	□	□
Number of samples per cycle		50 at 50 Hz	50 at 50 Hz	50 at 50 Hz	50 at 50 Hz	50 at 50 Hz	50 at 50 Hz
<b>Instantaneous rms values</b>							
Current	Per phase	■	—	—	—	—	■
	Total & Per Phase	—	—	—	■	—	■
	Neutral	—	—	—	■	—	■
Voltage	Phase to Phase	—	■	—	—	■	■
	Average & Phase to Neutral	—	—	—	—	■	■
Frequency		—	—	■	—	—	■
Power factor per phase & average		—	—	—	—	—	■
<b>Display</b>							
LED display		■	■	■	■	■	■
<b>Communication</b>							
RS-485 port		—	—	—	—	—	□
Modbus protocol		—	—	—	—	—	□

■ By Default    □ Optional Features    — Not Available

## Ordering Selection

	SPA01	SPV01	SPF01	TPA04	TPV08	VAFP17	
Class 1.0	SPA0110	SPV0110	-	TPA0410	TPV0810	Without RS485	VAFP1710
						With RS485	VAFPR1710
Class 0.5	SPA0105	SPV0105	-	TPA0405	TPV0805	Without RS485	VAFP1705
						With RS485	VAFPR1705
Class 0.2	-	-	SPF0102	-	-	-	